



Displays this window when a FOX485U connects to the computer for the first time.


Click Next after select “**No, not this time**”



As shown in the left side of the screen, one of two types of screen displays.

Click Next after select **"Install from a list or specific location (Advanced)"**



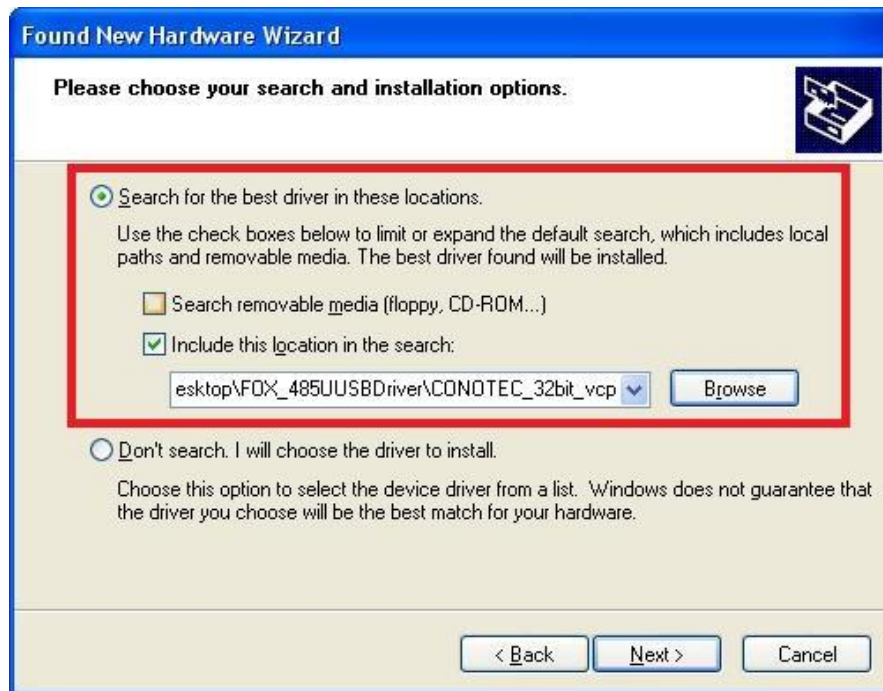

Select **"Search for the best driver in these location."**

Select **"Include this location in the search"**

Finds FOX-485 U Driver folder that receive Download after Browse click.

Specify CONOTEC _ 32 bits _ vcp folder in case of it is 32 bit computers

Specify CONOTEC _ 64 bits _ vcp folder in case of it is 64 bit computers

After all finishes, click **Next**




If displays one of the left side of the screen, FOX-485U Driver installation is completed.






Click **Start** → **Mouse right click at the My Computer** → **Properties**


It is the Driver Installation Instructions in case of not progressed or not displayed after FOX-485U connected.

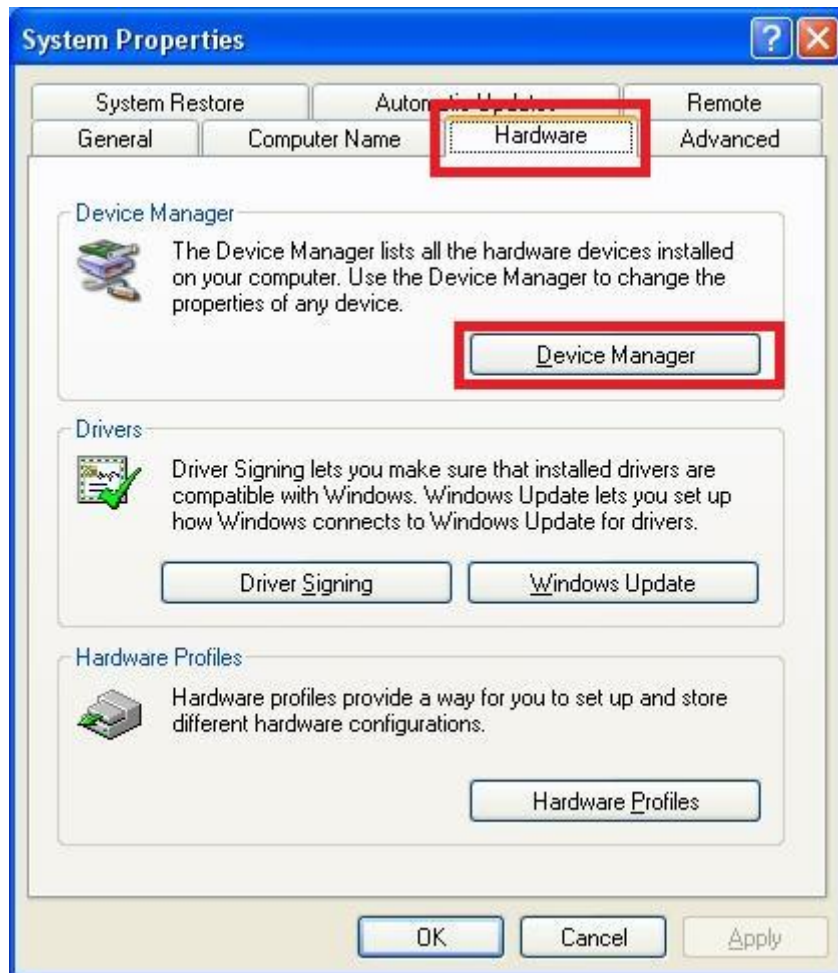


Click **Device Manager** after **Hardware** Tab

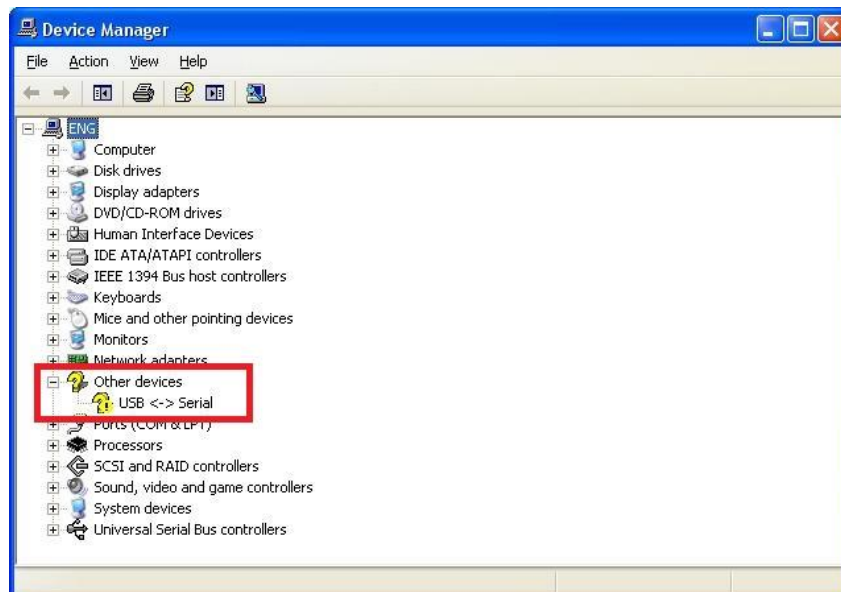


Thus, one of two screens will appear.
The method is the same on both screens.

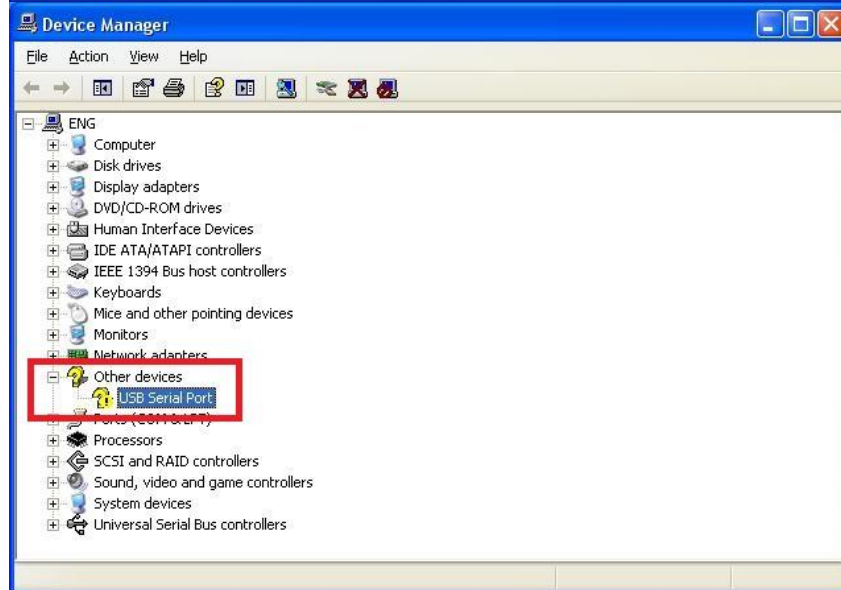

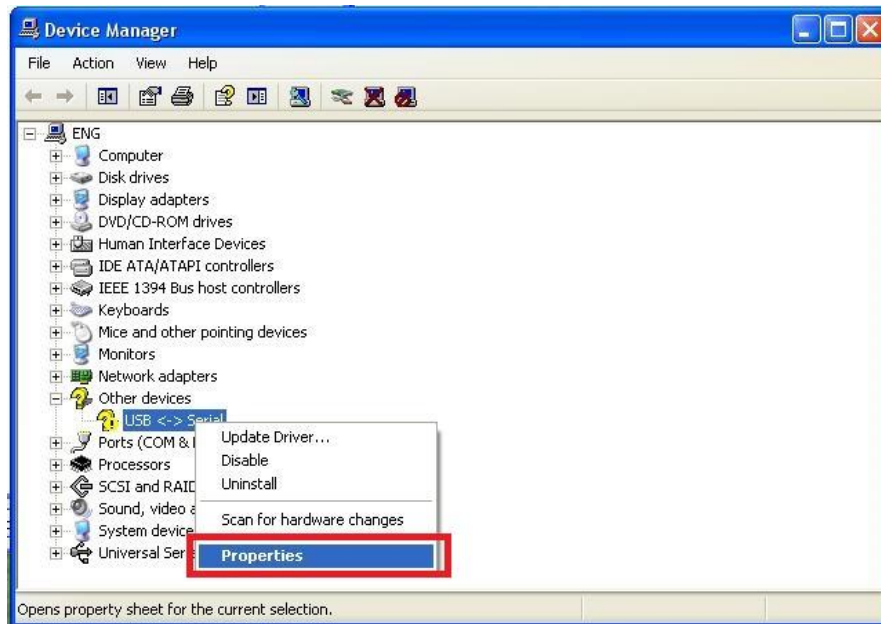

Properties click after mouse right click relevant device .

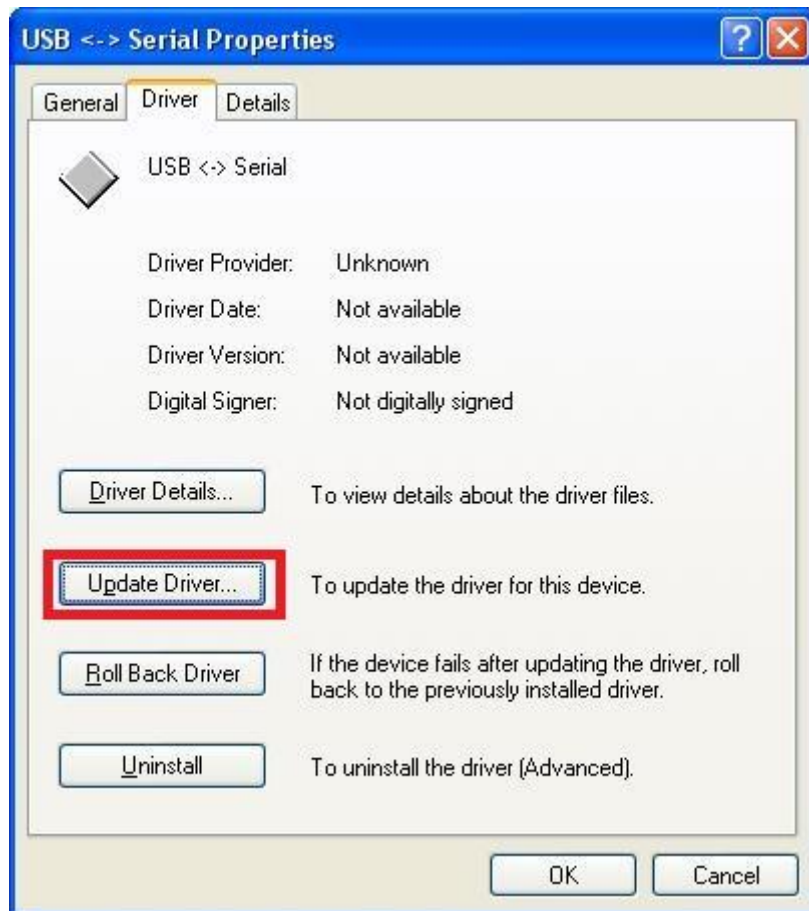

After click **Driver**, click Update Driver Tab.

Then follow from the first page of this manual.